

Henderson Set up 2014

Read each comment and don't look at the color cables.




Power button on Top...
Top cable goes to Wall.
Bottom cable goes to Elmo.

Your red, yellow, white cables go in the top AV out on the opposite side of box.



Computer out on Elmo goes to the docking station.

Remember that your AV Tuner box will be on and projector on Video to see announcements. Also your source button on your AV Tuner box needs to be on Analog. Turn AV tuner box off and Elmo on to see Elmo. Use the Elmo

to switch between Elmo and computer. You may need to use the window key on your keyboard  and the letter P to sink your computer with the projector. Your computer screen will automatically shrink in to fit the projector dimensions.